

AIR CONDITIONER FILTER

< ON-VEHICLE MAINTENANCE >


[WITHOUT 7 INCH DISPLAY]

ON-VEHICLE MAINTENANCE

AIR CONDITIONER FILTER

Exploded View

INFOID:000000003774654

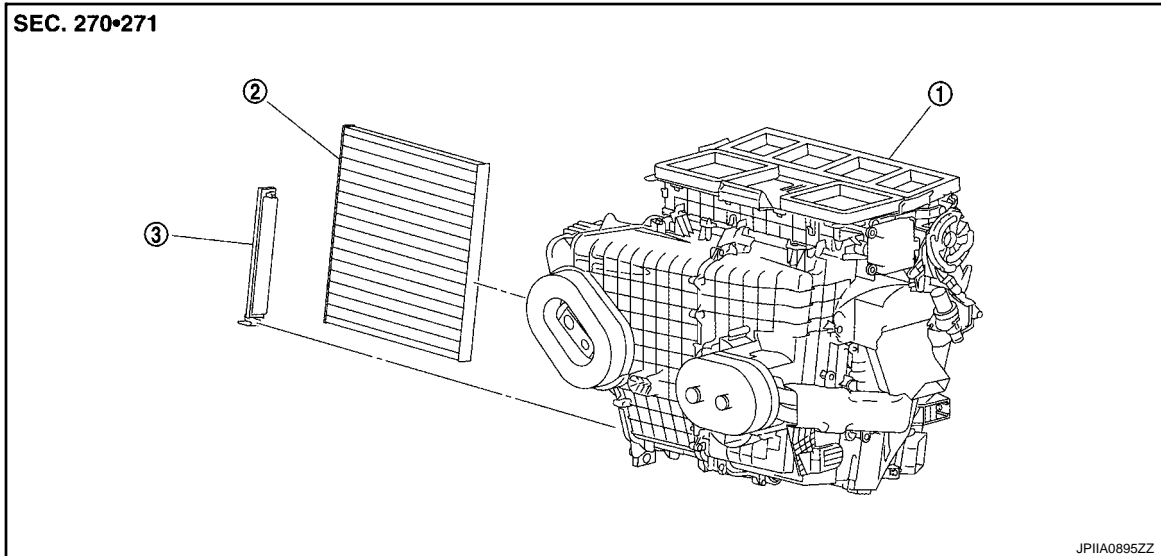

1. Heater & cooling unit assembly

2. Air conditioner filter


3. Filter cover

Removal and Installation

INFOID:000000003774655

REMOVAL

1. Remove filter cover (1), and then remove air conditioner filter (2).

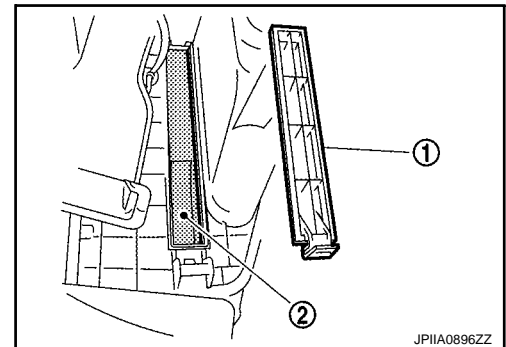

INSTALLATION

Installation is basically the reverse order of removal.

CAUTION:

- If the filter is deformed/damaged when removing, replace it with a new one. Deformed/damaged filter may deteriorate the duct collecting performance.
- When installing, handle the filter with extreme care to avoid deforming/damaging.

Replacement

INFOID:000000003774656

Replace air conditioner filter.

Refer to [MA-6, "Periodic Maintenance"](#).

Affix a caution label inside the glove box when replacing filter.